



INSTALLATION INSTRUCTIONS

Accessory

CHROME BAR ENDS
P/N 08F69-MCA-100

Application

GL1800

Publications No.


MII 11185

Issue Date

July 2005

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

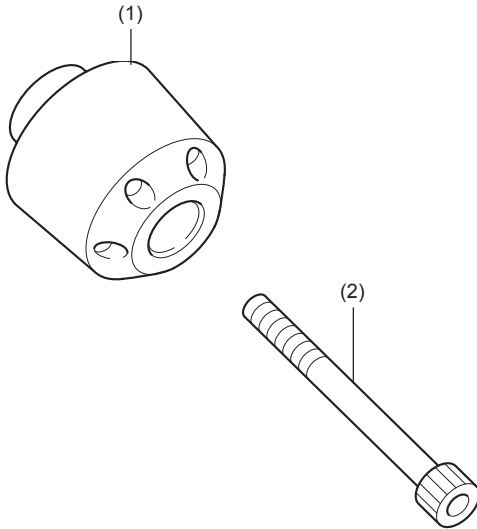

No.	Description	Qty
(1)	Handle weight	2
(2)	6 mm socket bolt	2

TOOLS AND SUPPLY REQUIRED

Hex wrench (5 mm)

Torque wrench


TORQUE CHART

Tighten all screws, bolts and nuts to their specified torques. Refer to the Service Manual for the tightening torques of removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm socket bolt	10	1.0	7

INSTALLATION

1. Remove the grip weights from the handlebar.

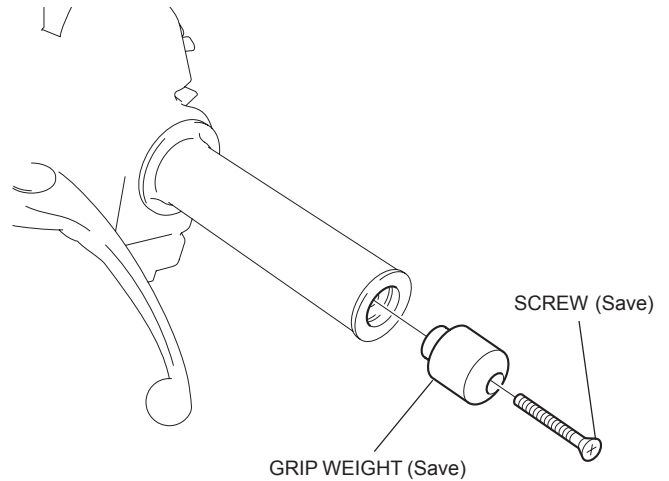

2. Install the chrome bar ends on the handlebar.

